

# Turnaround Panel Commands

Command	Description
A	jump to APU status
B	Battery toggle
G	APU Generator toggle
O	Turn the APU generator on or Off. The state of the generator is displayed on the switch.
S	Start the APU
1	Primary GPU Toggle
2	Secondary GPU Toggle

---

Revision #1

Created 6 April 2025 00:10:14 by Daniel Wolak

Updated 6 April 2025 00:14:56 by Daniel Wolak